



BLOWER OUTLET POSITION GUIDE



Vertical

All Maxumizer Air Blowers have a fully adjustable rotating air outlet that allows you to perfectly position the air outlet connection. The single point fastener and rotating outlet allow for easy alignment at your facility.

If you prefer to have your air outlet prepositioned at the Maxum factory, simply choose the outlet position number (01-11) shown in these images, and indicate this preference when placing your order.

If you do not specify a preference, your blower will be shipped with:

Vertical = Position 05
Horizontal = Position 09




Horizontal

*For "V" Model Dual Head Blowers, See Page 2 on back of this sheet.



If you do not specify a preference for your dual head blower, it will be shipped with position 05 and position 09. Standard position numbers are at approx. 45 degree increments, but the fully rotational outlet can accommodate any angle in between with a simple adjustment.

NOTE: For Dual Head Blower Models please make sure to specify the position for both the top head (01-06) and the bottom head (07-11).

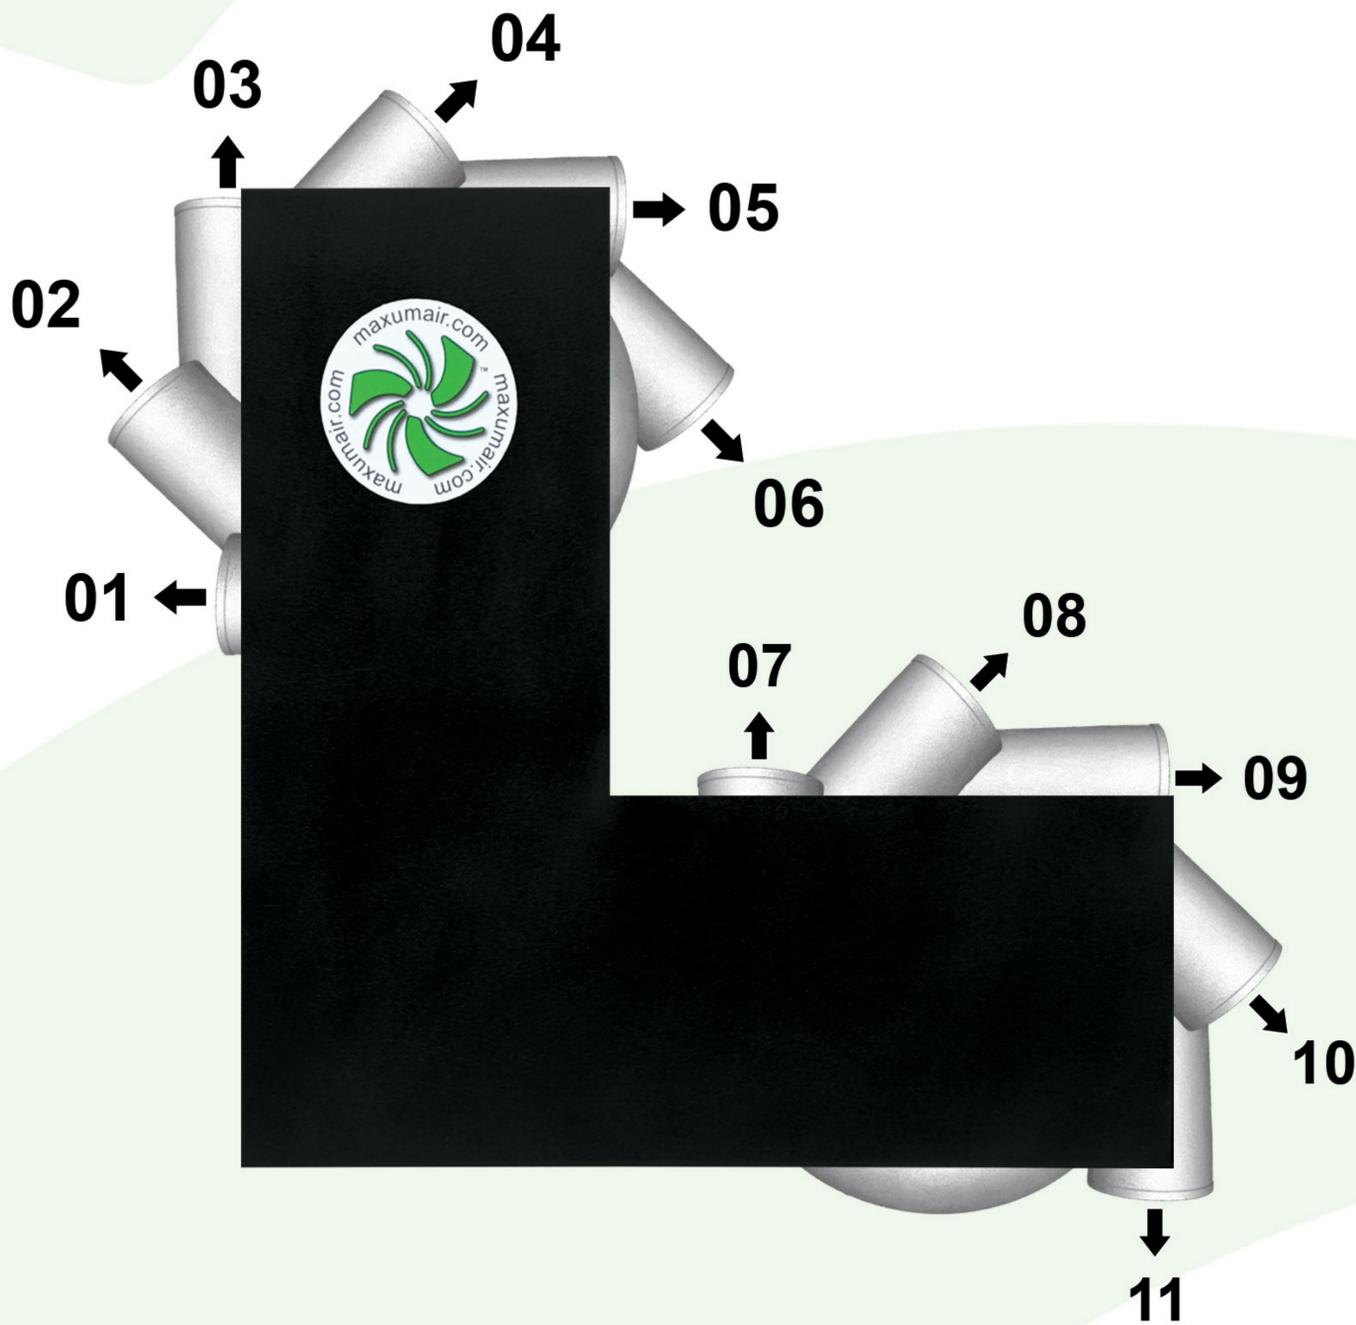

The single point fastener and rotating outlet allow for easy alignment at your facility.

